



WOCOM Limited  
Part of Virtual Enterprise

 
8769067240

www.wocomja.com

Configuring a SIP trunk in 3CX PBX involves several steps.

Below is a basic guide for configuring a SIP trunk in 3CX PBX:

## WOCOM Flexible Sip Trunk Network

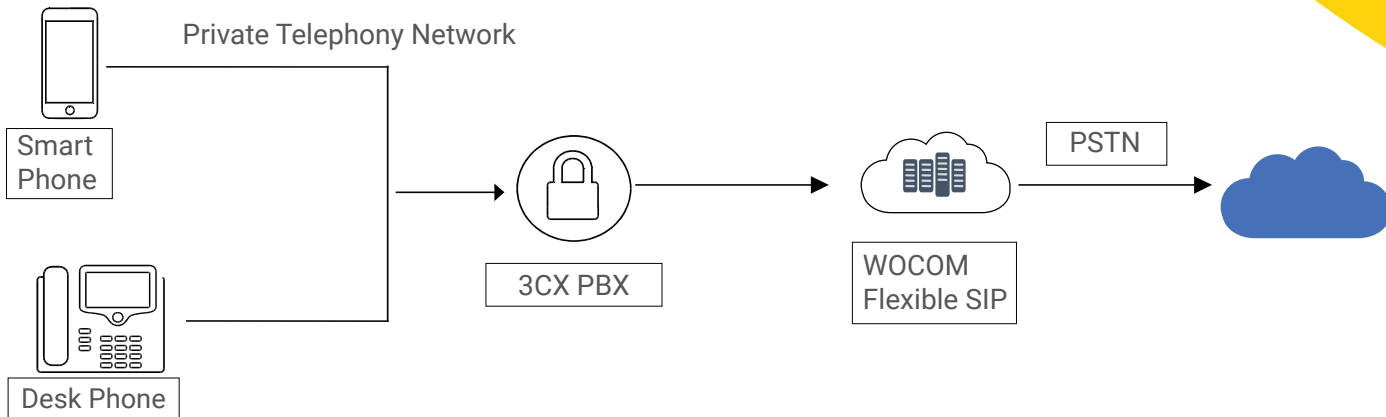

**Prior to starting, please ensure that you have the following information:**

 
WOCOM SIP trunk information	Value
Provider Address	voip1.wocomja.com – may vary based on location
Username	Your WOCOM assigned phone number
Authenticate ID	Your WOCOM assigned phone number
Password	Your WOCOM account secret /password

## Step 1: Access 3CX Management Console

Open your web browser and navigate to the 3CX Management Console.

## Step 2: Log In



Log in with your administrator credentials.

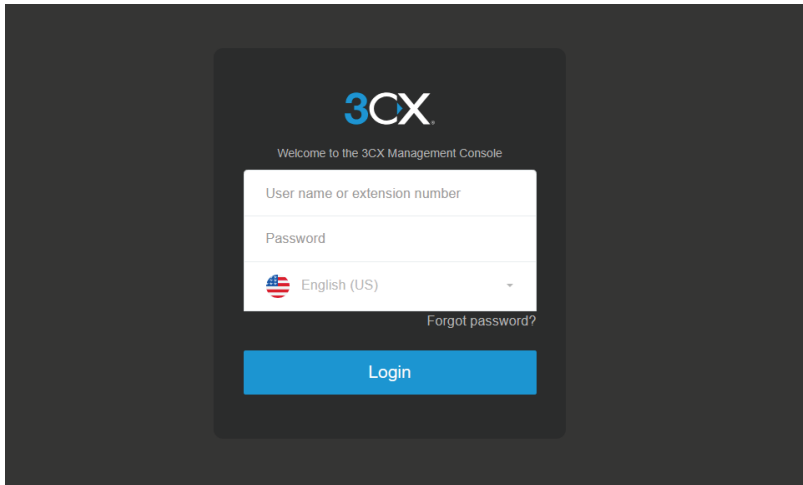

## Step 3: Navigate to SIP Trunks

In the left-hand menu, go to "SIP Trunks."
  
## Step 4: Add SIP Trunk

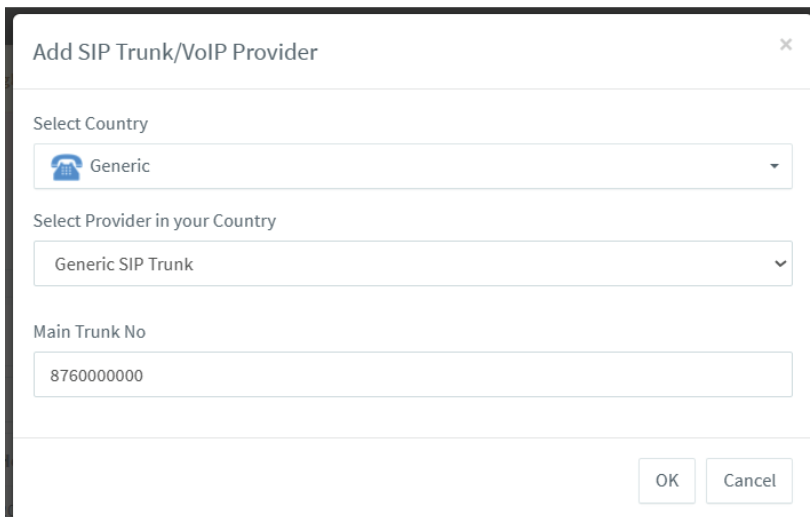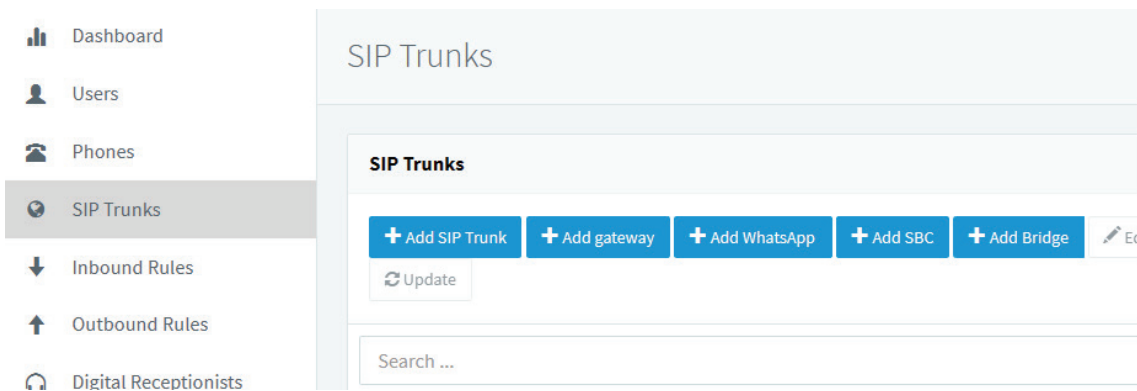


- Click on "Add SIP Trunk" to create a new SIP trunk.
- Under Country select "Generic"
- Under Provider in your Country, select "Generic SIP Trunk"

## Step 5: General Settings

- Enter a name for your SIP trunk in the "Trunk Name" field.
- Set the "Main Trunk Number" to the primary number associated with the SIP trunk.

## \*\*Step 6: SIP Server Details\*\*

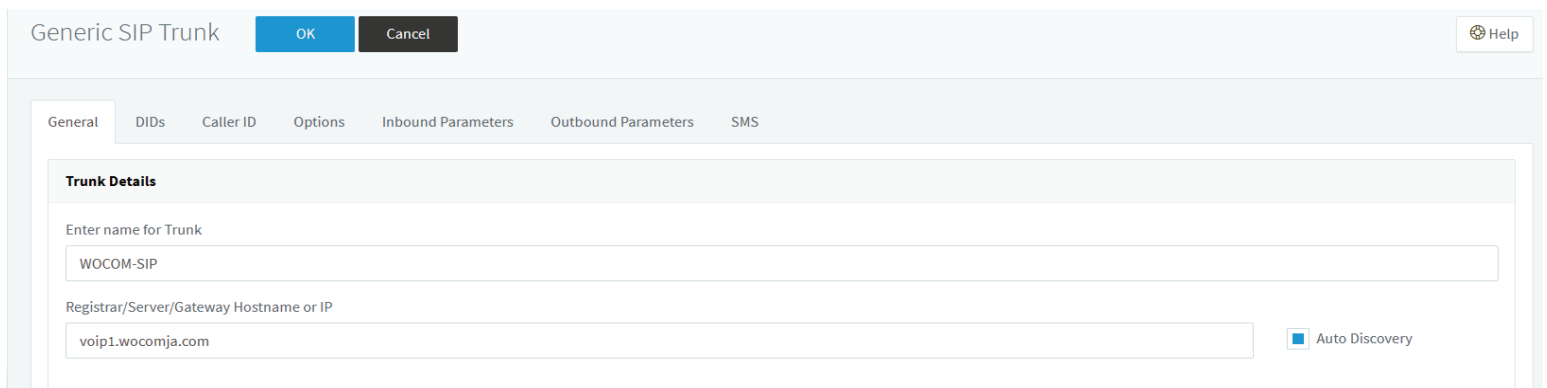

Generic SIP Trunk [OK] [Cancel] [Help]

General | DIDs | Caller ID | Options | Inbound Parameters | Outbound Parameters | SMS

**Trunk Details**

Enter name for Trunk  
WOCOM-SIP

Registrar/Server/Gateway Hostname or IP  
voip1.wocomja.com  Auto Discovery

- Under the "SIP Server" tab, enter the SIP server details provided by your WOCOM support representative. This includes the SIP server hostname or IP address.

## Step 7: Authentication Details

**Authentication**

Type of Authentication  
Register/Account based

Authentication ID (aka SIP User ID)  
8760000000

Authentication Password  
your-secret









- Enter the authentication details such as Username and Password provided by your WOCOM support representative.
- Set the Type of Antennation to: Register/Account based
- Once completed, select **OK** found at the top of your SiP trunk configuration page

---

### Red Dot – Signifies your sip trunk is not registered

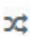●	WOCOM SIP	voip1.wocomja.com	Provider	10	8760000000
---	-----------	-------------------	----------	----	------------

To view the current registration status of the SIP trunk, you may need to select the "Refresh" tab.

 Edit	 Delete	 Enable All	 Disable All	 Refresh Registration	 Import Provider	 Export Provider	 Push Config
---	--	--	---	--	---	---	---

### Green Dot – Signifies that your sip trunk is registered

●	WOCOM SIP	voip1.wocomja.com	Provider	10	8760000000
---	-----------	-------------------	----------	----	------------